SD9480

Elektrikli Süpürge
kullanıcı el kitabı

* Bu cihazı çalıştırmadan önce lütfen talimatları dikkatle okuyun.
* Yalnızca iç mekanlarda kullanmak içindir.

TÜRKÇE

Mümkün olanları düşleyin

Samsung ürününü satın aldığınız için teşekkürler.

SAMSUNG

EEE Yönetmeliğine Uygundur

GÜVENLİK BİLGİLERİ

UYARI

- Cihazı çalıştırmadan önce, lütfen bu el kitabını dikkatlice okuyun ve referans olarak başvurmak üzere saklayın.

UYARI

- Aşağıdaki çalıştırma talimatları çeşitli modelleri içerdiği için, elektrikli süpürgenizin özellikleri bu el kitabında açıklanandan küçük farklılıklar gösterebilir.

KULLANILAN DİKKAT/UYARI SEMBOLLERİ

UYARI	Bir ölüm veya yaralanma tehlikesi olduğunu gösterir.
DİKKAT	Kişisel bir yaralanma veya mal hasarı riski olduğunu gösterir.

KULLANILAN DİĞER SEMBOLLER

	YAPMAMANIZ gereken bir durumu gösterir.
	İzlemeniz gereken bir şeyi gösterir.
	Fişi prizden çıkarmanız gerektiğini gösterir.

bu talimatları saklayın!

güvenlik bilgileri

ÖNEMLİ GÜVENLİK ÖNLEMLERİ

1. tüm talimatları dikkatle okuyun. Cihazı çalıştırmadan önce elektrik şebekenizin voltajının, elektrikli süpürgenin altındaki anma değeri plakasındaki voltajla aynı olduğundan emin olun.
2. UYARI : Elektrikli süpürgeyi, halı ıslakken kullanmayın.
   Su çekmek için kullanmayın.
3. Cihaz çocuklar tarafından ya da yakınında kullanıldığında yakın gözetim gereklidir. Elektrikli süpürgenin oyuncak olarak kullanılmasına izin vermeyin. Elektrikli süpürgeyi hiçbir zaman başıboş çalışmasına izin vermeyin. Elektrikli süpürgeyi yalnızca bu talimatlarda belirtilen amaçları doğrultusunda kullanın.
4. Elektrikli süpürgeyi toz bölmesi olmadan kullanmayın. En yüksek verimi elde etmek için toz bölmesi dolmadan önce boşaltın.
5. Elektrikli süpürgeyi kibritleri, canlı külleri ya da sigara izmaritlerini almak için kullanmayın. Elektrikli süpürgeyi fırınlar ve diğer ısı kaynaklarından uzak tutun. Isı, cihazın plastik parçalarının deforme olmasına ve rengini kaybetmesine neden olabilir. Ayrıca elektrikli süpürgeyi şeker, tuz, inşaat malzemesi tozu (çimento, metal talaşı vb.) almak için kullanmayın.
6. Sert, keskin nesneleri elektrikli süpürge ile almaktan kaçının, bunlar süpürgenin parçalarına zarar verebilir. Hortum tertibatına basmayın. Hortum üzerine ağırlık koymayın. Emme ve egzoz ağızlarını kapatmayın.
7. Elektrik fişini çekmeden önce elektrikli süpürgeyi makine üstündeki düğmeden kapatın. Toz bölmesini boşaltmadan önce fişini prizden çekin. Hasarı önlemek için lütfen fişi çekerken kablodan değil fişten tutun.
8. Bu cihaz, güvenliklerinden sorumlu bir kişinin gözetimi veya kontrolü dışında fiziksel, algılama veya zihinsel becerileri yeterli olmayan veya deneyimli ve bilgili olmayan kişiler (çocuklar da dahil) tarafından kullanılmamalıdır.
9. Cihazı kurcalamadıklarından emin olmak için çocuklar gözetilmelidir.
10. Cihazın temizliğinden ya da bakımından önce fişi prizden çekilmelidir.
11. Uzatma kablosu kullanılması önerilmez.
12. Elektrikli süpürgeniz düzgün çalışmıyorsa, güç kaynağını kapatın ve yetkili bir servis acentesine danışın.
13. Elektrik kablosu hasar gördüyse, tehlike oluşturmaması için üretici ya da servis acentesi tarafından veya benzeri bir ehliyetli kişi tarafından değiştirilmelidir.
14. Elektrikli süpürgeyi hortumundan tutarak taşımayın. Elektrikli süpürge setinin sapını kullanın.
15. Kullanılmadığında fişini prizden çekin. Fişini çekmeden önce düğmesinden kapatın.
16. Merdivenleri temizlerken dikkat edin. Elektrikli süpürgeyi devrildiğinde kullanmayın.
17. Toz odasında su varken toz bölmesini eğmeyin.
18. Su püskürtmeyin.
    Anahtar kısmını temizlemeyin.
19. Filtre servisi ve toz torbası ile ilgili önerilere sıkı bir şekilde uyun. Bu gerekliliklerin göz ardı edilmesi süpürgenin zarar görmesine ve ömrünün kısalmasına neden olabilir.

içindekiler

SÜPÜRGEYI BIRLEŞTIRME 05

05 Süpürgeyi birleştirme

SÜPÜRGENIN ÇALIŞTIRILMASI 06

06 Su siklonunun hazırlanması
07 Güç kablosu
07 Güç kontrolü

BAKIM ARAÇLARI VE FILTRE 09

09 Aksesuarların kullanımı
10 Zemin araçlarının bakımı
11 Toz bölmesini boşaltma
12 Toz torbasını temizleme
13 Dış filtrenin değiştirilmesi
13 Pili değiştirme (isteğe bağlı)

SORUN GIDERME 14

süpürgeyi birleştirme

SÜPÜRGEYİ BİRLEŞTİRME

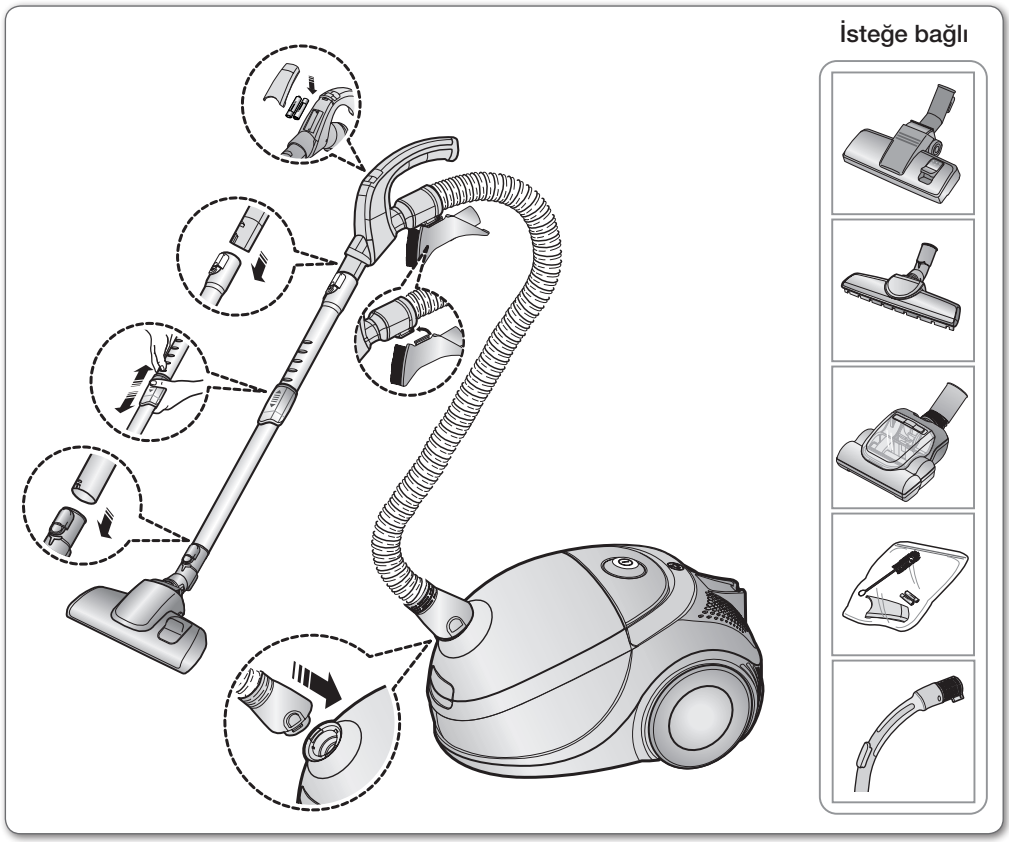

- Özellikler, modele göre farklı olabilir. Bkz. sayfa 5, 7, 8, 10.
- Saklamak için zemin ağzının üzerine yerleştirin.

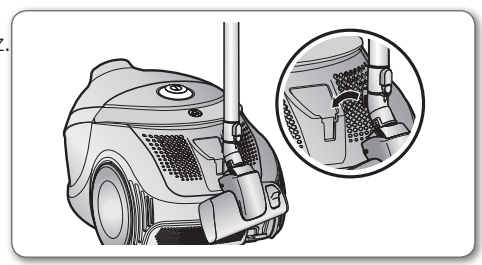

süpürgenin çalıştırılması

SU SİKLONUNUN HAZIRLANMASI

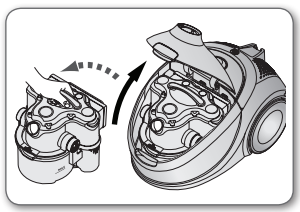

1. Temizliğe hazırlamak için kapağı açarak su siklonunu dışarı çıkartın.

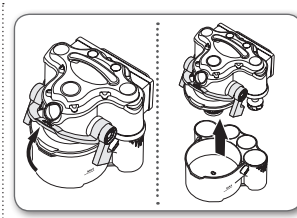

2. Su siklonunu çıkartmak ve üst kısmı ayırmak için kolu yukarı çekin.

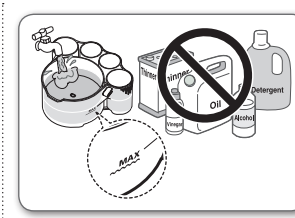

3. "MAX" seviyesine kadar su ile doldurun. Yağ, sirke, deterjan ve uçucu madde kullanmayın.

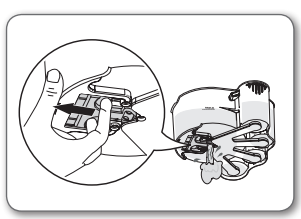

4. Su seviyesinin ayarlama koluyla ayarlamak için kolu çekin ve toz bölmesinde su kalmayana kadar dökün.

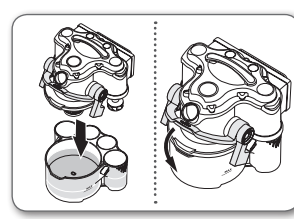

5. Su siklonunu takmak için üst kısmı yerine yerleştirin ve kolu aşağı itin.

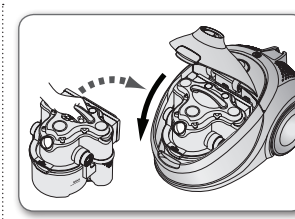

6. Kullanmadan önce toz bölmesini ana gövde içinde itin ve elektrikli süpürgenin toz kapağını "tıklama" sesi duyana kadar bastırın.

Su siklonunun doğru şekilde bakımı

- Toz, lif ve saçların birikmesini önlemek için elektrikli süpürgeyi temizleyin.
- HEPA filtrelerini düzenli aralıklarla temizleyin ya da değiştirin.
- Her kullanımdan sonra cihazı boşaltın ve temizleyin. Bakteri ya da mantar üremesine neden olabilir.
- Su siklonunu atmadan önce cihazı kapatın ve fişini çekin. Ardından yerel elektrikli cihaz atma kurallarını izleyin.

GÜÇ KABLOSU

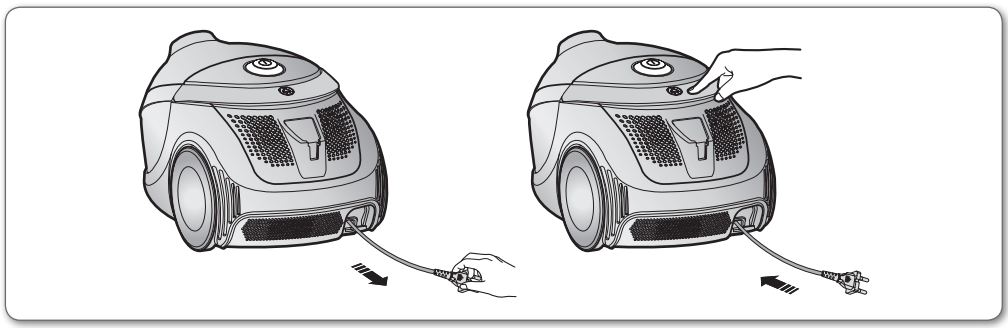

DİKKAT

- Fişi elektrik prizinden çekerken kablodan değil frizin kendisinden kavrayın.

GÜÇ KONTROLÜ

Uzaktan kumanda tipi (isteğe bağlı)

- HORTUM

1. Elektrikli süpürge **AÇMA/KAPAMA(⏻)**
Elektrikli süpürgeyi çalıştırmak için AÇMA/KAPAMA düğmesine basın. Kapatmak için düğmeye yeniden basın.

2. Elektrikli süpürge **(+, -)**
Elektrikli süpürgenin vakum gücünü artırmak için **(+)** düğmesine basın. Elektrikli süpürgenin vakum gücünü azaltmak için **(-)** düğmesine basın.

Saptaki kumanda düğmesini kullanırken sap vericisini örtmeyin.

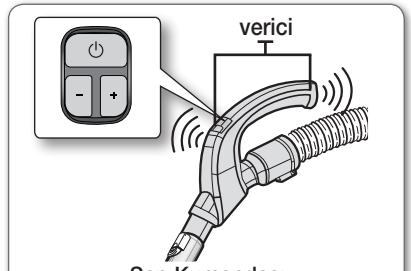

Sap Kumandası
Elektrikli süpürge kızıl ötesi sinyaller kullanarak kumanda edilir.

süpürgenin çalıştırılması

- GÖVDE

Doğru modu seçmek için güç düğmesine art arda basın.
(AÇMA[MAX] → KAPATMA)

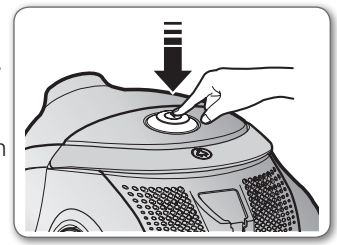

Uzaktan sap kumandası çalışmıyorsa süpürge makinenin gövdesi üstündeki kumanda düğmesi kullanılarak çalıştırılabilir.

⏻	AÇMA/KAPATMA düğmesi elektrikli süpürgeyi çalıştırır ve durdurur.

Gövdeden kumanda tipi (isteğe bağlı)

- HORTUM

Perde, küçük halılar ve diğer hafif kumaşları temizlerken emiş gücünü azaltmak için delik açılana kadar hava musluğunu çekin.

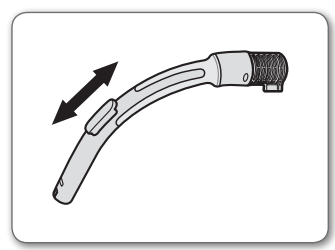

- GÖVDE

Elektrikli süpürgeyi çalıştırmak ve kapatmak için güç AÇMA/KAPAMA düğmesine art arda basın.
(AÇMA ↔ KAPATMA)

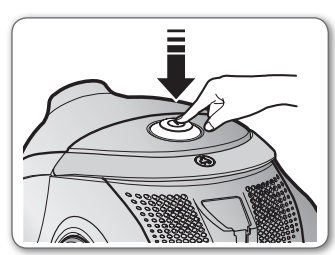

bakım araçları ve filtre

AKSESUARLARIN KULLANIMI

Aksesuar

- Aksesuarı hortum sapının ucuna takın.

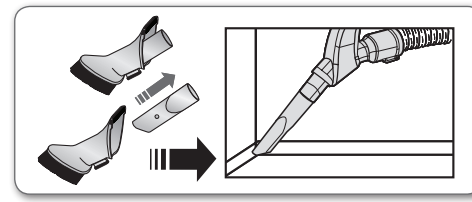

- Toz alma aparatını kullanmak için aksesuarı hortum sapının ucuna takın.

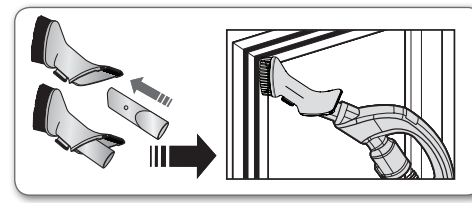

- Döşeme aparatını kullanmak için aksesuarı hortum sapının ucuna takın.

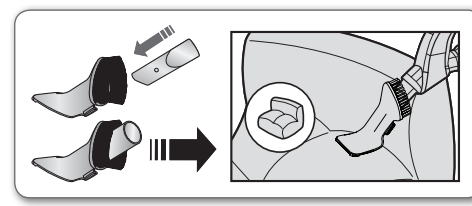

Boru

- Teleskopik borunun uzunluğunu, ortasında bulunan uzunluk kontrol düğmesini ileri ve geri kaydırarak ayarlayın.

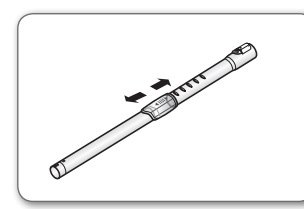

- Tıkanmaları kontrol etmek için teleskopik boruyu çıkartın ve kısaltın. Bu, borudaki tıkanıklığın giderilmesini kolaylaştırır.

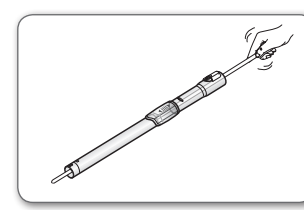

bakım araçları ve filtre

ZEMİN ARAÇLARININ BAKIMI

2-Basamak fırçası (isteğe bağlı)

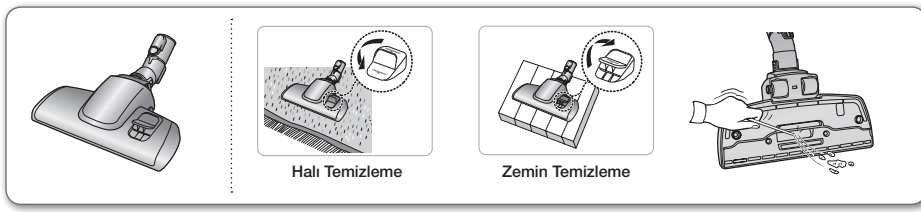

- Giriş kolunu zemin yüzeyine göre ayarlayın.
  Giriş tıkanmışsa atık maddeyi tamamen temizleyin.

Parke bakım fırçası (isteğe bağlı)

Tozu geniş bir alanda bir kerede alın.
Giriş tıkanmışsa atık maddeyi tamamen temizleyin.

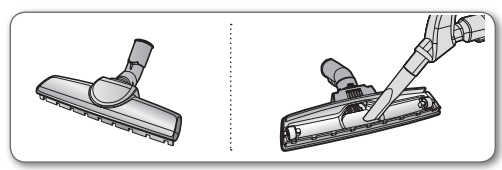

Süper türbin fırçası (isteğe bağlı)

- Hayvan kıllarının ve halı liflerinin iyice temizlenmesi için.

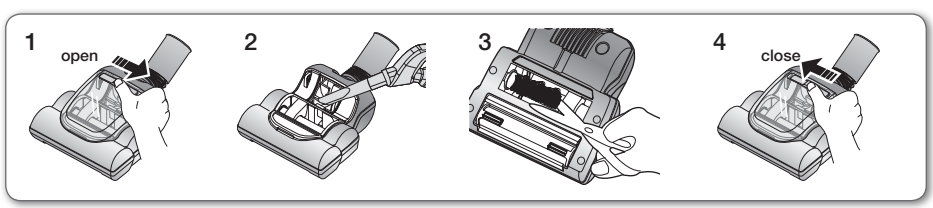

Hayvan kıllarının sık temizlenmesi, maddelerin tambur çevresine dolaşmasından dolayı dönüşün yavaşlamasına neden olabilir. Bu durumda tambur dikkatle temizlenmelidir.

1. Kolu şekil 1'de gösterildiği gibi ok yönünde kaydırın ve kapağı açın.
2. Fırça muhafazasının içindeki tozu kuru bir toz alma ya da çatlak aparatı ile alın.
3. Fırçaya dolaşmış toz ve saçları makas kullanarak temizleyin.
4. Kolu şekil 4'te gösterildiği gibi ok yönünde kaydırın ve kapağı kapatın.

DİKKAT

Lütfen fırçaya zarar vermemeye dikkat edin.

TOZ BÖLMESİNİ BOŞALTMA

Su siklonunu her vakum sonrasında temizlemelisiniz. Zemini ve halıları korumak için vakum ünitesini bir lavabo ya da küvet üzerinde temizleyin. Su siklonunu temizlemek için aşağıdakileri yapın.

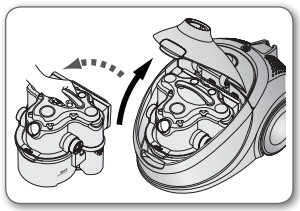

1. Kol kilidini açın ve kapağı kaldırarak su siklonunu ana gövdeden çıkartın.

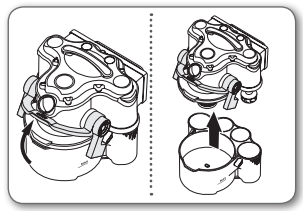

2. Su siklonunu düz bir zemine koyun. Kolu yukarıda tutun ve üst kısmı tümüyle ayırın.

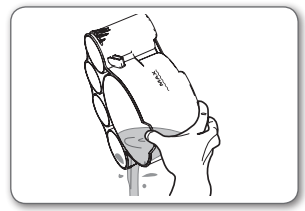

3. Tozu bölmeden plastik bir torbaya dökün.

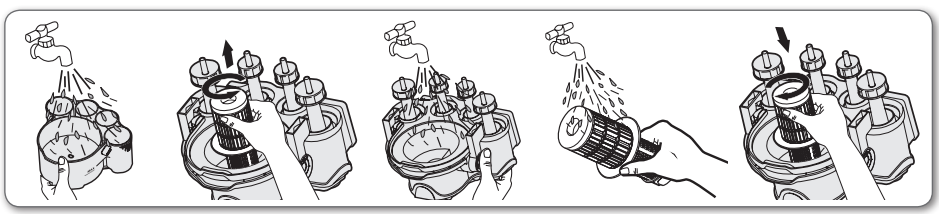

4. Tüm su siklonu aksamını durulayın.

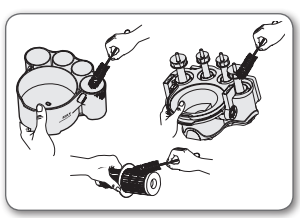

5. Gerekiyorsa bir temizlik fırçası kullanın.

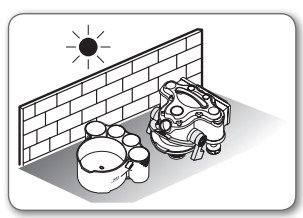

6. Tüm su siklonu aksamını gölgede ve havada kurumaya bırakın.

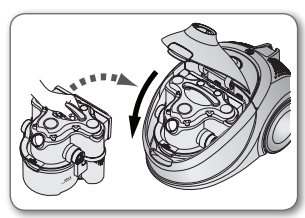

7. Bir araya getirilmiş siklonu ana gövdeye yerleştirin.

bakım araçları ve filtre

TOZ TORBASINI TEMİZLEME

Toz torbası ne zaman temizlenir

- Emiş sürekli olarak belirgin şekilde azalıyorsa.
- Sünger çok kirlenmişse.

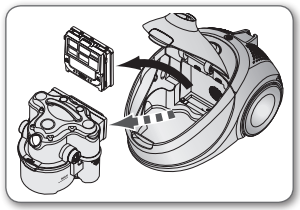

1. Toz bölmesini ve toz torbasını gösterildiği gibi çıkartın.

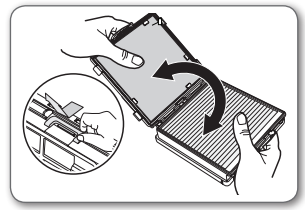

2. Sabit çerçeveyi çıkartın ve toz torbası kapağını açın.

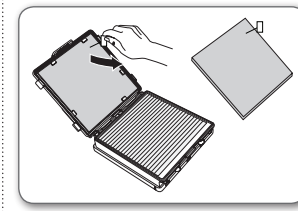

3. Süngeri toz torbasından ayırın.

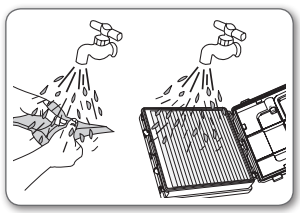

4. Süngeri ve toz torbası içindeki filtreyi su ile yıkayın.

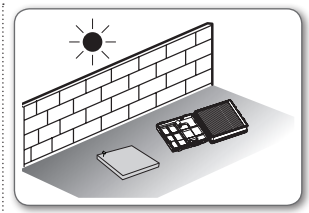

5. Süngeri ve filtreyi en az 12 saat gölgede kurumaya bırakın.

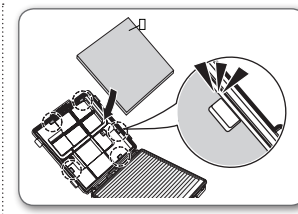

6. Süngeri dikkatle toz torbasının içine koyun.

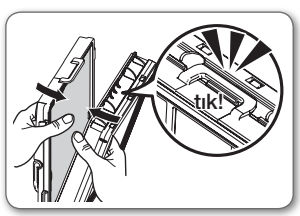

7. Toz torbası kapağını kapatın ve sabit çerçevenin düzgün şekilde kilitlendiğini kontrol edin.

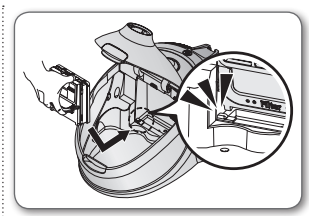

8. Birleştirilmiş toz torbasını, önce toz torbasının altı girecek şekilde yerleştirin ve ana gövdeye itin.

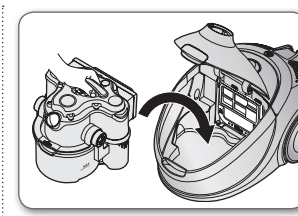

9. Bir araya getirilmiş siklonu ana gövdeye yerleştirin.

Toz torbası filtresinin yılda bir kez değiştirildiğinden emin olun. Elektrikli süpürgeyi çok sık kullanıyorsanız, kaynak filtresi azalabilir. Bu durumda filtrenin daha sık değiştirilmesi önerilir.

Toz torbasını sürekli temiz tutmaya çalışın. Durumunu sürekli kontrol edin. Bu gerekliliğin göz ardı edilmesi motorun ve gövdenin aşırı ısınmasına, cihazın arızalanmasına ve ömrünün kısalmasına neden olabilir.

DIŞ FİLTRENİN DEĞİŞTİRİLMESİ

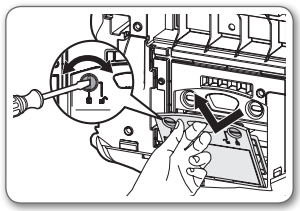

1. Kapağı açmak için kilitleri saat yönünde ( ) çevirin.

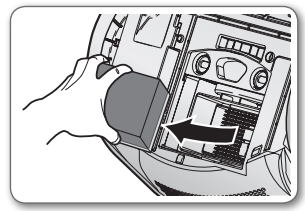

2. HEPA filtreyi ana gövdenin içinden ayırın.

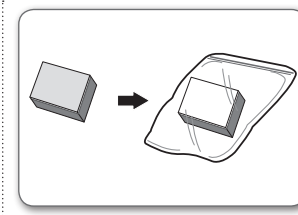

3. Kullanılan filtrenin yeni HEPA filtresi ile değiştirilmesi.

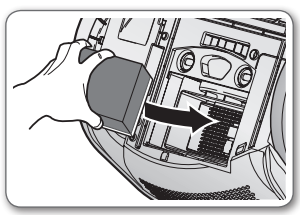

4. Yeni HEPA filtreyi ana gövdeye dikkatle yerleştirin.

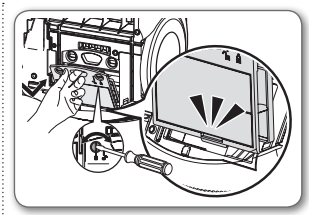

5. Kapağı, ana gövdenin üzerine kasanın altından takın ve kapağı düzgünce kilitleyin ( ).

★ Çıkış filtresinin yılda bir kez değiştirildiğinden emin olun. Elektrikli süpürgeyi çok sık kullanıyorsanız, kaynak filtresi azalabilir. Bu durumda filtrenin daha sık değiştirilmesi önerilir.

★ Durumunu sürekli kontrol edin. Bu gerekliliğin göz ardı edilmesi gövdenin aşırı ısınmasına, cihazın arızalanmasına ve ömrünün kısalmasına neden olabilir.

PİLİ DEĞİŞTİRME (isteğe bağlı)

★ **1.** Elektrikli süpürge çalışmadığında pilleri değiştirin. Sorun devam ederse lütfen yetkili satıcı ile görüşün.
2. 2 adet AAA boyutunda pil kullanın.

⚠ DİKKAT
1. Pilleri kesinlikle sökmeyin ya da şarj etmeyin.
2. Pilleri kesinlikle ısıtmayın ya da ateşe atmayın.
3. (+), (-) kutupları ters çevirmeyin.
4. Pilleri doğru şekilde atın.

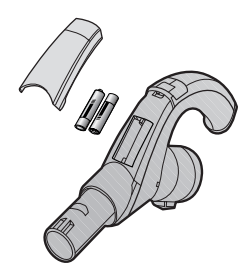

PİL TÜRÜ: AAA Boyutlu

sorun giderme

SORUN	ÇÖZÜM
Motor yavaşlıyor ve çalışmıyor.	• Kabloyu, fişi ve prizi kontrol edin. • Soğumasını bekleyin.
Emiş gücü dereceli olarak azalıyor.	• Tıkanmaları kontrol edin ve giderin.
Kablo tamamen sarılmıyor.	• Kabloyu 2~3m çekin ve kablo sarma düğmesine basın.
Elektrikli süpürge yavaşlıyor, pislikleri almıyor	• Hortumu kontrol edin ve gerekiyorsa değiştirin.
Toz bölmesinde su sızıntısı var.	• Üst kısımda lastik contanın iyice takıldığından emin olun. • Toz bölmesinin alt kısmındaki kolun lastik contasını kontrol edin.
Gövdenin iç kısmında aşırı su damlıyor.	• İç gövdede bir dereceye kadar damlalar olabilir. Lütfen su siklonunu tamamen kurutun.
Kirli su ana gövdenin üstünden dışarı çıkıyor	• Filtrenin düzgün şekilde yerleştirildiğinden emin olun. • Su miktarı çok artarsa, toz bölmesinin içindeki suyun MAX çizgisinin üstünde olup olmadığını kontrol edin ve su seviyesinin MAX çizgisinin altına inmesini sağlayın.
Arka kapaktan su geliyor.	• Su siklonunun su seviyesini kontrol edin. • Lütfen arka kapaktan gelen su kesilene kadar elektrikli süpürgeyi su siklonu olmadan çalıştırın.
Emiş gücü düşük ya da azalıyor.	• Lütfen filtreleri kontrol edin. Gerekiyorsa talimatlarda gösterilen şekilde temizleyin. Filtrelerin durumu kötüyse yenileri ile değiştirin.
Gövde aşırı ısınıyor	• Lütfen filtreleri kontrol edin. Gerekiyorsa talimatlarda gösterilen şekilde temizleyin.
Statik elektrik deşarjı	• Lütfen emiş gücünü azaltın.
Elektrikli süpürge kullanılırken kötü kokular geliyor	• Lütfen elektrikli süpürge yeniyken (4-5 gün) kullanım sırasında hafif bir koku olabileceğine dikkat edin.

Bu elektli süpürge aşağıdakilerle uyumludur.
EMC Direktifi : 2004/108/EEC
Alçak Gerilim Direktifi : 2006/95/EC

Kullanım ömrü 10 yıldır.

Teknik Özellikler

MODEL NO	Boyutlari (E*B*Y)	Net ağirlik	Maximum güç	Nominal güç	Emiş gücü	Toz hacmi	Siklon Filtre	Metal Boru Tipi
SD9480	320 x 292 x 530	9.0kg	1600W	1400W	200W	2.0 lt	Hayir	teleskobik

SAMSUNG

SD9480

Vacuum Cleaner
user manual

✻ Before operating this unit, please read the instructions carefully.
✻ For indoor use only.

ENGLISH

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/register

SAMSUNG

This EEE is compliant with RoHS

safety information

SAFETY INFORMATION

WARNING

- Before operating the appliance, please read this manual thoroughly and retain it for your reference.

WARNING

- Because these following operating instructions cover various models, the characteristics of your vacuum cleaner may differ slightly from those described in this manual.

CAUTION/WARNING SYMBOLS USED

WARNING	Indicates that a danger of death or serious injury exists.
CAUTION	Indicates that a risk of personal injury or material damage exists.

OTHER SYMBOLS USED

	Represents something you must NOT do.
	Represents something you must follow.
	Indicates that you must disconnect the power plug from the socket.

save these instructions!

safety information

IMPORTANT SAFEGUARDS

1. Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.
2. WARNING : Do not use the vacuum cleaner when rug or floor is wet.
   Do not use to suck up water.
3. Close supervision is necessary when any appliance is used by or near children. Do not allow the vacuum cleaner to be used as a toy. Do not allow the vacuum cleaner to run unattended at any time. Use the vacuum cleaner only for its intended use as described in these instructions.
4. Do not use the vacuum cleaner without a dust bin. Empty the dust bin before it is full in order to maintain the best efficiency.
5. Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts. Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolour the plastic parts of the unit. Also do not use your vacuum cleaner to pick up sugar, salt, dust of building materials (e.g. cement, metal shavings and so on).
6. Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly. Do not put weight on the hose. Do not block the suction or the exhaust port.
7. Switch the vacuum cleaner off on the body of the machine before unplugging from the electrical outlet. Disconnect the plug from the electrical outlet before emptying the dust bin. To avoid damage, please remove the plug by grasping the plug itself, not by pulling on the cord.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. Children should be supervised to ensure that they do not play with the appliance.
10. The plug must be removed from the socket outlet before cleaning or maintaining the appliance.
11. The use of an extension cord is not recommended.
12. If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
13. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
14. Don't carry the vacuum cleaner by holding the hose. Use the handle on the vacuum cleaner set.
15. Unplug the cleaner when not in use. Turn off the power switch before unplugging.
16. Be careful when you clean stairs. Do not use the vacuum cleaner when it fall over.
17. Do not tilt the dust bin, when water is inside the dust chamber.
18. Do not spray water.
    Do not clean the switch part.
19. Strictly follow the recommendations in respect of servicing of filters and dust pack. Ignoring these requirements could result in damage to the cleaner and reduce its service life.

contents

ASSEMBLING THE CLEANER 05

05 Assembling the cleaner

OPERATING THE CLEANER 06

06 Preparing the aqua cyclone
07 Power cord
07 Power control

MAINTAIN TOOLS AND FILTER 09

09 Using accessory
10 Maintain floor tools
11 Emptying the dust bin
12 Cleaning the dust pack
13 Changing the outlet filter
13 Change the battery (Optional)

TROUBLESHOOTING 14

ASSEMBLING THE CLEANER

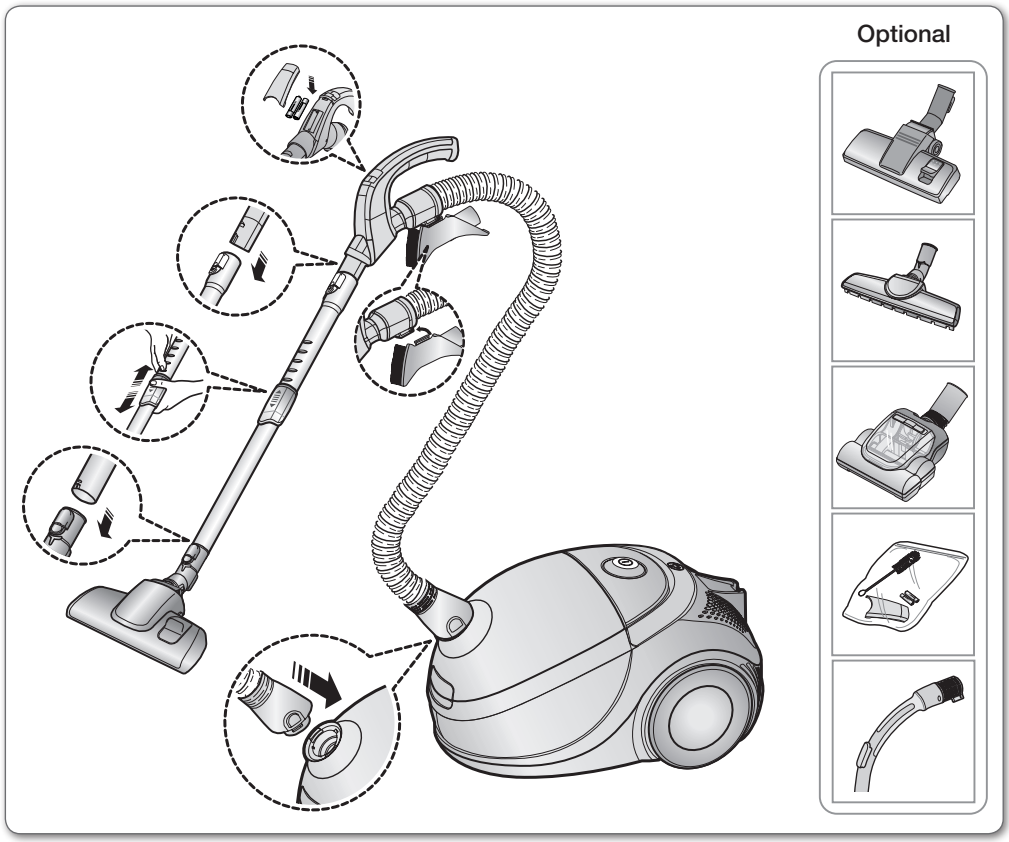

- Features may vary according to model. Refer to 5,7,8,10 page.
- For storage, park the floor nozzle.

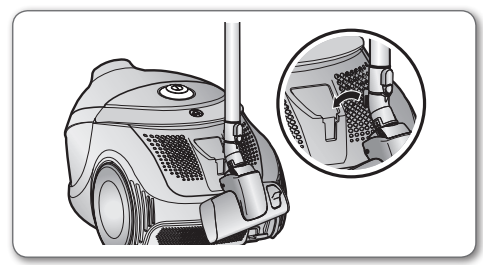

operating the cleaner

PREPARING THE AQUA CYCLONE

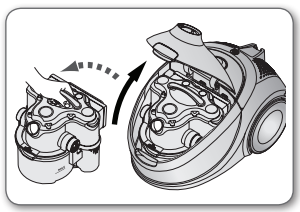

1. For preparing the cleaning, take the aqua cyclone out by opening the cover.

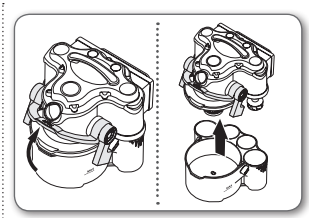

2. Pull the lever up to disassemble the aqua cyclone and separate the upper part.

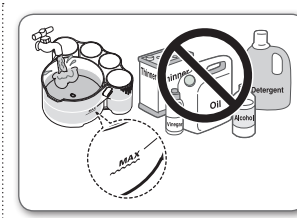

3. Pour water until it reaches “MAX” level. Do not use oil, vinegar, detergent and all volatile matter.

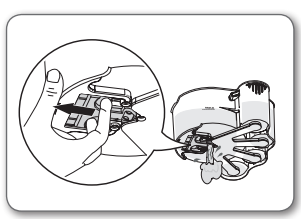

4. To adjust the water level by the adjusting lever, pull the lever open until no water drops from the dust bin.

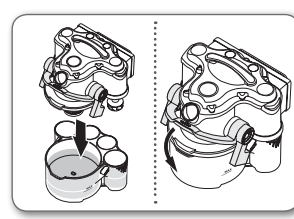

5. Put on the upper part and push the lever down to assemble the aqua cyclone.

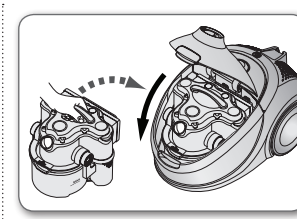

6. Before use, push the dust bin into the main body and press the cover dust of the vacuum cleaner until you hear the “click” sound.

Maintain the aqua cyclone properly

- Clean the vacuum cleaner to avoid dust, lint, and hair build up.
- Clean or change the HEPA filters at regular intervals.
- Empty and clean the device after each use. Can lead to the breeding of bacteria and fungus.
- Before disposing of the Aqua cyclone, cut the power plug off of the power cord. Then, follow your local laws regarding the disposal of electrical appliances.

POWER CORD

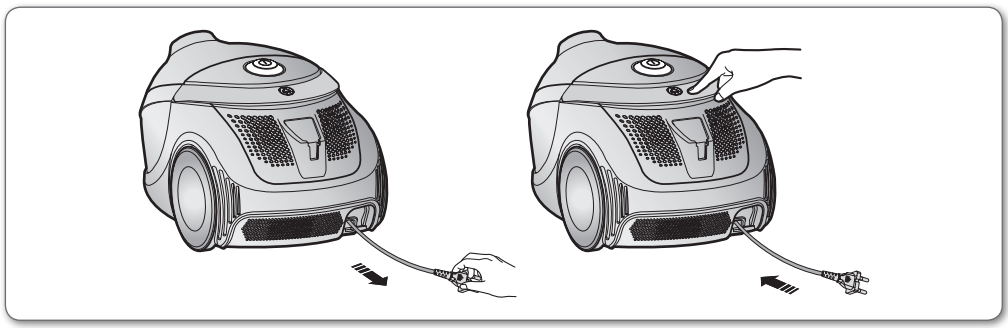

CAUTION

- When removing the plug from the electrical outlet, grasp the plug, not the cord.

POWER CONTROL

Remote-control type (Optional)

- HOSE

1. Vacuum cleaner **ON/OFF(⏻)**
   Press the ON/OFF button to operate the vacuum cleaner. Press again to stop the vacuum cleaner.

2. Vacuum cleaner **(+, -)**
   Press the **(+)** button to operate the vacuum to high suction power. Press the **(-)** button to operate the vacuum to low suction power.

Don't cover the handle sender when you use a handle control button.

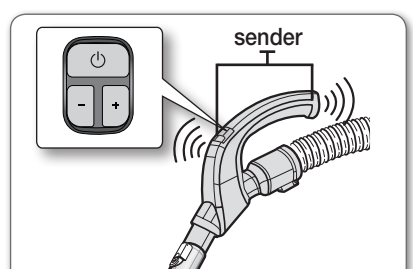

Handle Control
The cleaner is controlled by using infrared signals.

operating the cleaner

- BODY

Press the power control button repeatedly to select the correct mode.
(ON[MAX] → OFF)

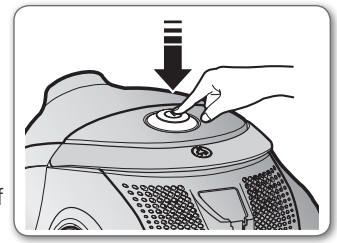

If the remote handle control is not working, the cleaner can be operated using the control button on the body of the machine.

⏻	The ON/OFF button operates the vacuum cleanner or stops it.

Body-control type (Optional)

- HOSE

To reduce suction for cleaning draperies, small rugs and other light fabrics, pull the tap air until the hole is open.

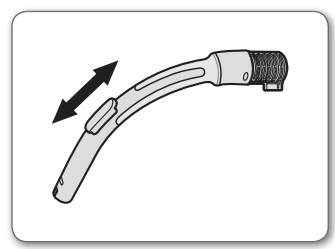

- BODY

Press the power ON/OFF button repeatedly to start and to stop the vacuum cleaner.
(ON ↔ OFF)

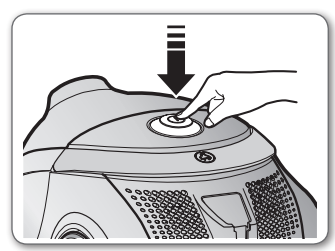

maintain tools and filter

USING ACCESSORY

Accessory

- Push the accessory on to the end of thehose handle.

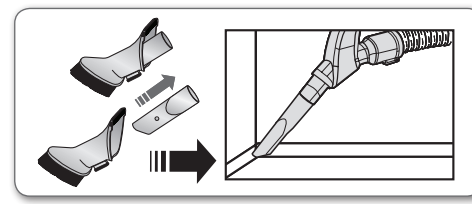

- To use the dusting tool, push the accessory on to the end of the hose handle.

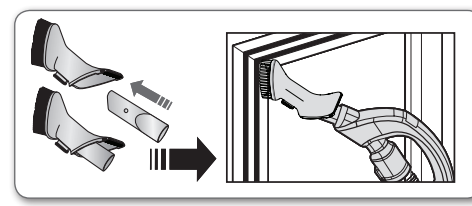

- To use the upholstery tool, push the accessory on to the end of the hose handle.

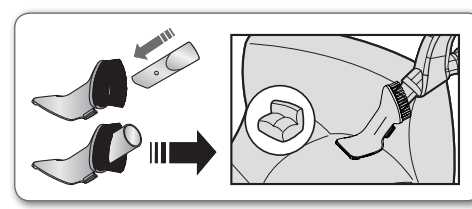

Pipe

- Adjust the length of the telescopic pipe by sliding the length control button located in the center of the telescopic pipe back and forth.

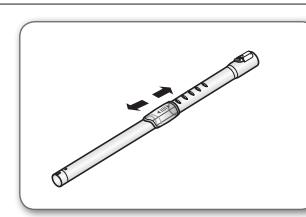

- To check for blockages, separate the telescopic pipe and adjust to shorten. This allows for easier removal of waste clogging the tube.

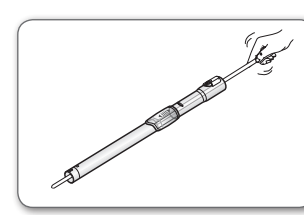

maintain tools and filter

MAINTAIN FLOOR TOOLS

2-Step brush (Optional)

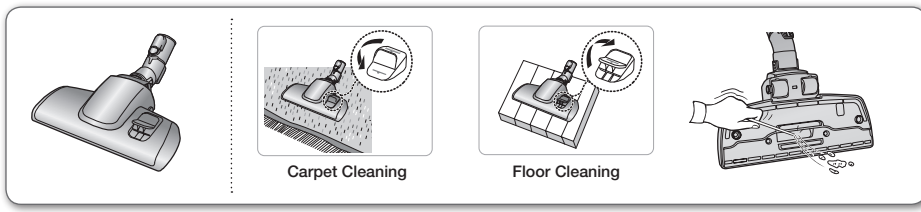

- Adjust the inlet lever according to the floor surface.
  Remove waste matter completely if the inlet is blocked.

Parquet master brush (Optional)

Vacuum dust inwide area at once.
Remove waste matter completely if the inlet is blocked.

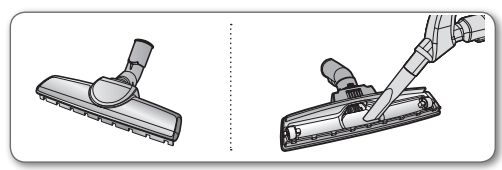

Super turbine brush (Optional)

- For improved pickup of pet hair and fibre on carpets.

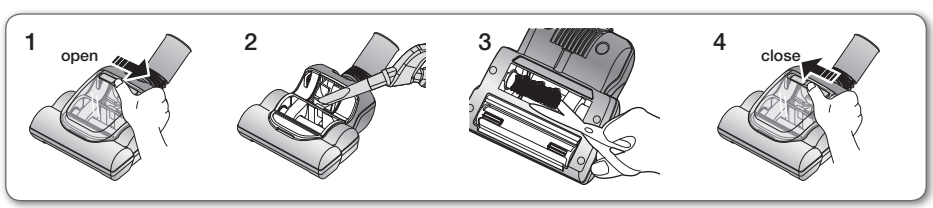

Frequent vacuuming of hair or pet fur may cause a falling-off of the rotation due to matters tangled around the drum. In this case, clean the drum with care.

1. Click the lever to the arrow direction as shown figure1 and open the cover.
2. Remove dust inside the brush housing using a dry duster or crevice tool.
3. Remove waste matter such as dust and hair tangled around the brushbar using scissors.
4. Click the lever to the arrow direction as shown figure4 and close the cover.

CAUTION Please be careful not to damage the brush.

EMPTYING THE DUST BIN

You should clean the Aqua cyclone after each vacuuming. Be sure to clean the vacuum over a sink or other basin to keep your floor and carpets. To clean the Aqua cyclone, do the following.

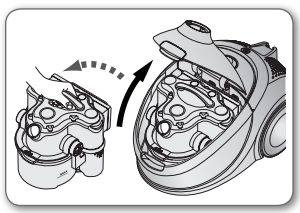

1. Lift the cover lock and open the cover to take the aqua cyclone out of the main body.

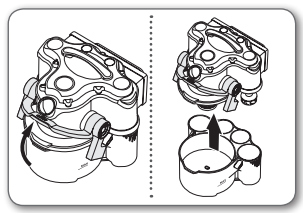

2. Place the aqua cyclone on the flat table. Hold the lever up and separate the upper part completely.

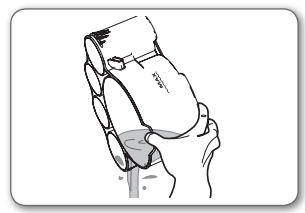

3. Throw the dust away to a bin, plastic bag.

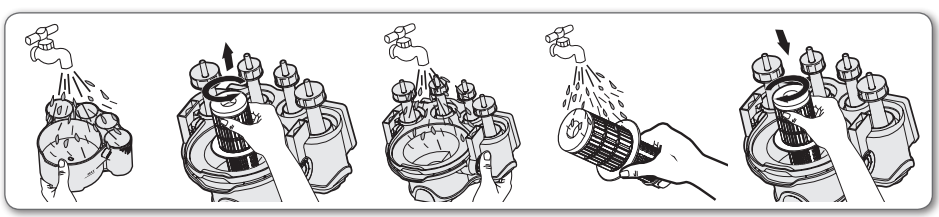

4. Rinse the full set of aqua cyclone.

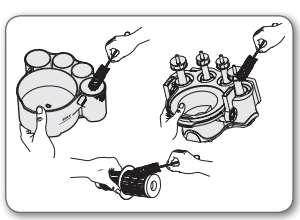

5. Use the cleaning brush if it is needed.

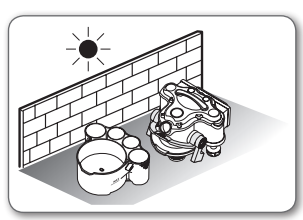

6. Let the full set of aqua cyclone fully dried in the shade.

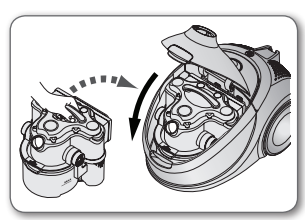

7. Put the assembled cyclone into the main body.

maintain tools and filter

CLEANING THE DUST PACK

When to clean the dust pack

- When suction is noticeably reduced continuously.
- When the sponge is heavily polluted.

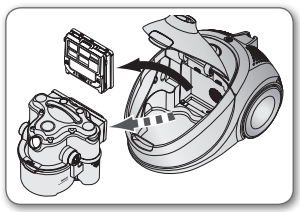

1. Remove the dust bin and the dust pack as shown.

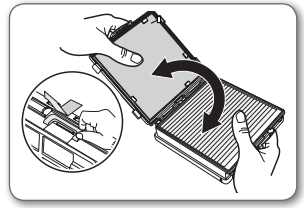

2. Remove the fixed frame and open the dust pack cover.

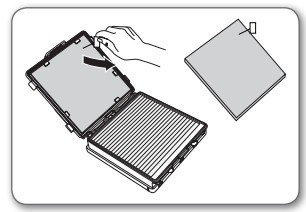

3. Separate the sponge from the dust pack.

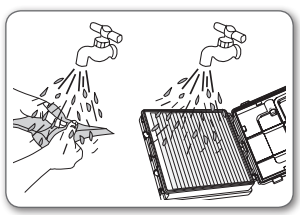

4. Wash the sponge and the filter inside the dust pack with water.

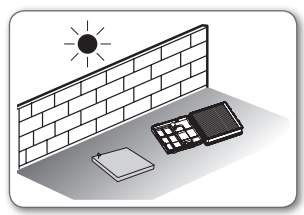

5. Let the sponge and filter dry in the shade for more than 12 hours.

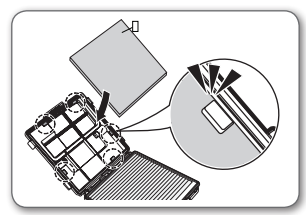

6. Put the sponge into the dust pack carefully.

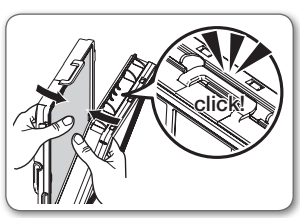

7. Close the dust pack cover and check the fixed frame locked property.

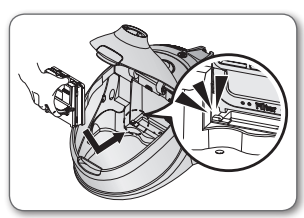

8. Place the assembled dust pack from the bottom of the dust pack space first and push it to the main body.

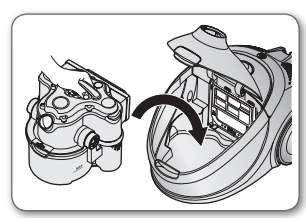

9. Put the assembled cyclone into the main body.

Make sure that the dust pack filter is changed once a year. If you use a vacuum cleaner very often, resource filter can be reduced. In this case it is recommended to change the filter with greater frequency.

Try to keep the dust pack clean constantly. Regularly check its condition. Ignoring this requirement can lead to motor and body overheating, failure and reduce the service life of the appliance.

CHANGING THE OUTLET FILTER

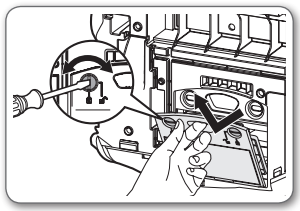

1. Turn the locks in clockwise (🔓) to open the cover.

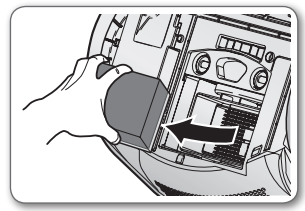

2. Separate the HEPA filter from inside of the main body.

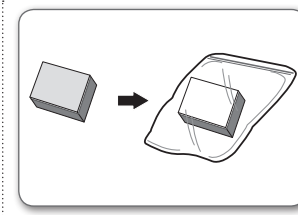

3. Changing the used filter to new HEPA filter.

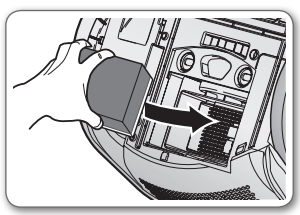

4. Put the new HEPA filter to the main body carefully.

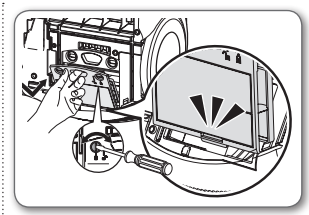

5. Put the cover on the main body from the bottom of the case and lock (🔒) the cover properly.

★ Make sure that the outlet filter is changed once a year. If you use a vacuum cleaner very often, resource filter can be reduced. In this case it is recommended to change the filter with greater frequency.

★ Regularly check its condition. Ignoring this requirement can lead to body overheating, failure and reduce the service life of the appliance.

CHANGE THE BATTERY (Optional)

★ **1.** When the vacuum cleaner does not work, replace the batteries. If the problem persists, please contact our authorized dealer.
2. Use 2 batteries of size AAA.

⚠ CAUTION
1. Never disassemble or recharge the batteries.
2. Never heat up the batteries or throw them into fire.
3. Do not reverse (+), (-) poles.
4. Dispose of the batteries property.

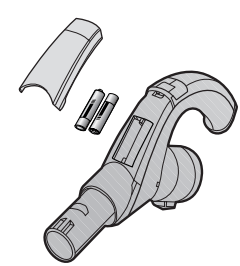

BATTERY TYPE : AAA Size

troubleshooting

PROBLEM	SOLUTION
Motor downs and does not start.	• Check cable, plug and socket. • Leave to cool.
Suction force is gradually decreasing.	• Check for blockage and remove.
Cord does not rewind fully.	• Pull the cord out 2~3m and push down the cord rewind button.
Vacuum cleaner downs, does not pick up dirt	• Check hose and replace if required.
Water leakage from the dust bin.	• Check rubber packing inserted tightly at the upper part. • Check rubber packing to the lever at the bottom of the dust bin.
Excessive water drops from the inside of the body.	• Some droplets on the inside body are to be expected. Please dry the aqua cyclone fully.
Dirty water comes out of the top of the main body	• Check the filter is located properly. • If the amount of water becomes excessive, check if water inside dust bin is over the max line and make the water level is under the max line.
Water comes out from the back cover.	• Check the water level of the aqua cyclone. • Please operate the vacuum cleaner without the aqua cyclone until water does not come out from the back cover.
Low or decreasing suction.	• Please check filters. If required clean it as illustrated in the instruction. If filters are out of conditions, change them to new one.
Body overheating	• Please check filters. If required clean it as illustrated in the instruction.
Static electricity discharge	• Please decrease power suction.
Unpleasant smell during vacuuming	• Please note that there may be a slight smell during vacuuming when the cleaner is new (4-5 days).

This Vacuum cleaner is approved the following.
EMC Directive : 2004/108/EEC
Low Voltage Directive : 2006/95/EC

memo

Samsung Electronics Co., Ltd.
12th Fl., Samsung Main Bldg.,
250, 2-Ka, Taepyung-Ro, Seoul Korea
TEL: 82-31-200-0909

CE LVD : TÜV Product Service GmbH
Ridlerstr. 65, 80339 Munchen, Germany
TEL: +49 89 5008 40

EMC : SEQAL
Blackbushe Business Park Saxony Way Yateley
Hampshire GU46 6GG, UK
TEL: +44 (0)1252 863800

Ithalatçı Firma

SAMSUNG

SAMSUNG Electronics İstanbul Pazarlama ve Ticaret LTD.ŞTİ.
Flatofis İstanbul İş Merkezi,Otakçılar Cad.
Bina No: 78, Kat:3, No: B3, **34050,** Eyüp, İstanbul /Türkiye

Code No. DJ68-00523G REV(0.0)